

**Material to have for the installation:**

- 1 hammer
- 1 cordex, cord for the bigger length
- Drill bit 6/17 MP50
- Drill-Hole puncher
- Extension cable 220
- Truck lashing straps
- Wooden batten if needed step 6

For an easier installation, unroll the top cover 3 days before the installation.

**Step 1:**

Trace a marking with a cordex or a cord on the surface to be covered.

**Step 2:**

Install the polyan film on the whole surface.

**Step 3:**

Install the Elista underlayment plates.

**Step 4:**

Fold up the polyan film over the plates. Tape both parts of the polyan film to protect the foams.

**Step 5:**

Place the rubber top cover on the foam. If the top cover is bigger than the surface, center the top cover. The extra surface of top cover will be used to be fixed.

Item-nr.	Description
08SM2032	top cover
05FP0000	polyan film
01BM3035	latex foam 35mm thick
10BA0245	aluminium strips
10PE0670	wedge anchors Ø 6mm 70mm length

MS-mattress for calving pen, per sq. m.

**spinder**  
DAIRY HOUSING CONCEPTS

Number:	0506900-A
Unit:	mm
Date:	12-7-2021

Drawing remains our property and may not be reproduced, shown or entrusted to third party or used otherwise. No rights can be derived from this drawing.

**Step 6:**

Fix the top cover on one side on the wall, so that the top cover is raised. If it is not possible to fix it on the wall, fix a wood batten on the ground between the foam and the wall and fix the top cover on this wooden batten to avoid the liquids to stagnate.

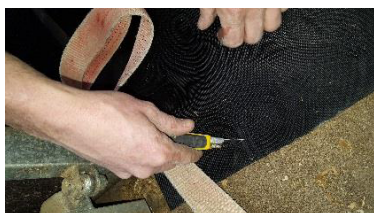
**Step 7:**

For the tension, there are 2 methods: Use the existing poles of the cubicles or, failing that, drill the concrete, diameter 12mm, and hammer a concrete iron, diameter 10mm, what creates the strap point.

Already fixed side (step 6)

**Step 8:**

At 5 cm from the edge of the top cover (the side parallel to the one already fixed) you have to do 2 – 3 holes of 2cm on to introduce the hooks of your truck lashing strap.

**Step 9:**

Stretch on the side parallel to the one already fixed to a maximum until the first waves appear.

Already fixed side

**Step 10:**

Fix the top cover with nails on the side parallel to the one already fixed to maintain the tension.

**Step 11:**

Repeat the steps 7-8-9-10 on the 2 other sides.

MS-mattress for calving pen, per sq. m.

**spinder**  
DAIRY HOUSING CONCEPTS

Number:	0506900-A
Unit:	mm
Date:	12-7-2021

Drawing remains our property and may not be reproduced, shown or entrusted to third party or used otherwise. No rights can be derived from this drawing.



**Step 12:**

To finalize the installation, fix the aluminum bars with nails on the extremities of each side.



The guarantee of the Elista calving pen is submitted to the respect of the installation indicated in this mounting instructions document.

MS-mattress for calving pen, per sq. m.

**spinder**

DAIRY HOUSING CONCEPTS

Number: 0506900-A

Unit: mm

Date: 12-7-2021

Drawing remains our property and may not be reproduced, shown or entrusted to third party or used otherwise.  
No rights can be derived from this drawing.